

CLEARING THE DOWNRIGGER NETWORK



 
 
 


CLEARING THE DOWNRIGGER NETWORK >

Once a device or downrigger is paired to a Optimum, it will remember them, even if the device or downrigger are not actively communicating with the downrigger they are paired with. In some cases, it may be necessary to clear the memory of the Master downrigger and forget any paired devices and downriggers on the Fish Hawk. To do this, use the Settings menu on the Master downrigger. Devices on a Cannon network may include the Fish Hawk 4XD System, another downrigger, or a paired device. Restoring the network on the downrigger is helpful when creating a new network or assigning a new Bluetooth Master. Restoring the network helps to clear everything that is paired all at once. If you wish to clear only one specific paired item on the network, use the instructions for "Forgetting a Device, Fish Hawk or Downrigger on a Downrigger" section of these instructions.

1

- Turn the Master downrigger "on", by pressing the Power button on the keypad.
- On the downrigger keypad, press the Menu button twice to bring up the Settings Menu on the Color LCD.
- From the Settings Menu, use the Down button to scroll to the item listed Bluetooth. Press the Right button to open the Bluetooth Menu.
- From the Bluetooth Menu, use the Down button to scroll to the Restore Network option. Press the Right button to continue.
- Once selected, the downrigger Color LCD screen brings up a Restore Network screen. Use the Right button to Confirm that the downrigger should forget all devices on the network.
- The downrigger will flash a message Network Restored to confirm that all devices and downriggers were deleted from memory.

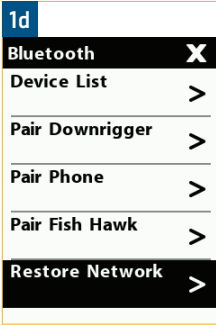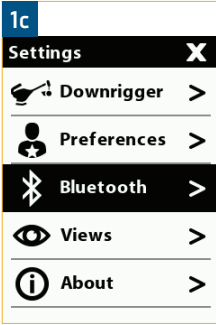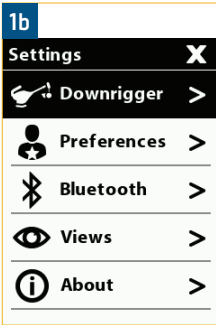








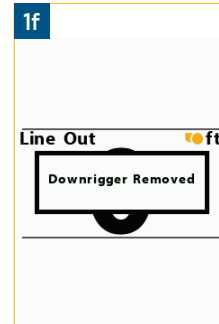 
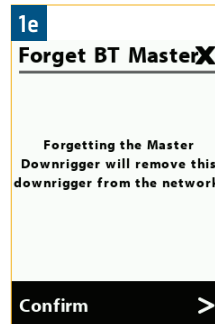 
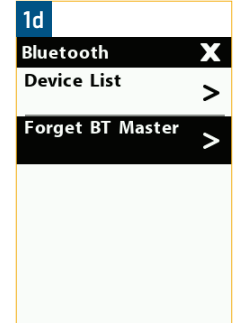 
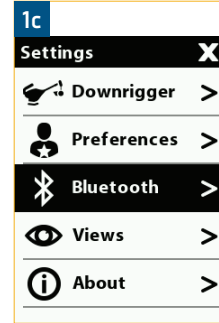 
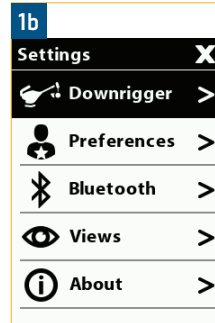 
CLEARING THE MASTER DOWNRIGGER FROM THE CLIENT DOWNRIGGER

CLEARING THE MASTER DOWNRIGGER FROM THE CLIENT DOWNRIGGER

It may be necessary to remove a Client downrigger from the network. This can be accomplished without interrupting the rest of the network simply by removing the Master downrigger from the Client downrigger. This may be helpful when moving one Client downrigger to a different network, or replacing one downrigger in an existing network with a new one.

1

- Turn the Client downrigger "on", by pressing the Power  button on the keypad.
- On the downrigger keypad, press the Menu  button twice to bring up the Settings Menu on the Color LCD.
- From the Settings Menu, use the Down  button to scroll to the item listed Bluetooth. Press the Right  button to open the Bluetooth Menu.
- From the Bluetooth Menu, use the Down  button to scroll to the Forget BT Master option. Press the Right  button to continue.
- Once selected, the downrigger Color LCD screen bring up a Forget BT Master screen. Use the Right  button to Confirm that the downrigger should forget the Master downrigger.
- The downrigger will flash a message Downrigger Removed to confirm that it was deleted from memory.



NOTICE: Forgetting the Master downrigger will remove this downrigger from the network.